

WIZEDRIVE-101S



Specification

GSM Module	Four-Band GSM850/900/1800/1900(MHz)
GPRS connectivity	GPRS multi-slot class 10, GPRS mobile station class B
GPS Module	Ubox 7020
Position accuracy	10 meters, 2D RMS
Tracking sensitivity	- 159dBm
Acquisition sensitivity	- 144dBm
acquisition	Hot start 1s, warm start 30s,cold start 32s
Indicator LED	3colors indicator: Power, GPS, GSM
Product feature	Small, easy to install. Built-in switching power, wide voltage input range. Can be powered by cigarette lighter or vehicle battery power.

Hardware Features

Positioning	Location tracking via SMS/GPRS (TCP/UDP): SMS location racking. Signal real time location tracking. GPRS location tracking via time interval.
Alarm	Main power cut off alarm. Shock alarm. Over speed alarm.

Special features (work with Wizedrive tracking software)



**Installed on site by professionals with over
30 years experience in vehicle tracking technology**



Monitor	<p>Get real time position and alarms notice. Get last position. Position data includes: terminal ID, time, address, position validity, alarm (over-speed, SOS), vehicle status (engine, door, shock), speed, mileage, direction, GSM signal, GPS signal, Longitude, Latitude.</p>
Mileage	<p>Mileage statistics, can synchronize initial mileage. Working time and non-working time driving mileage statistics.</p>
Geo-fence	<p>Area-in alarm, area-out alarm, and set geo-fence area as station. Set geo-fence area as station and manage the in/out vehicle. Fence type includes: round, rectangle, polygon, broken line. Fence alarm real time notes, and can send alarm info to user specified mobile phone and email.</p>
Reports	<p>Vehicle exceeds any speed enquiry. Vehicle various speed statistics. Vehicle parking time and address report. Vehicle daily running info report. Report the vehicles that go through specified location. Driver over time report Fatigue driving report (Set drive and rest times for driver). Engine on/off time Door open/close time Vehicle shock info. Mileage, speed curve chart display.</p>
Others	<p>Automatically get address by longitude and latitude. Different colours to show vehicle different status: running/stop/alarm/Invalid location. Grouped display vehicles according to their info or status. Vehicle alarms or status changes, tracker sends SMS Historic track can be output by KML, and load by Google Earth. All kinds of reports can be output to HTML, Word, Excel files.</p>

CAPE TOWN

Riaan Wium
Cell: 082 941 5901
Email: info@wizedrive.com
Skype: riaanwium

PORT ELIZABETH

Pieter Kitshoff
Cell: 082 117 0112
Email: pieter@wizedrive.com
Skype: pieter.kitshoff

GAUTENG

Ernie
Cell: 083 227 2581
Email: ernie@wizedrive.com

NAMIBIA

Werner Verwey
Cell: +264 81 251 2450
Email: verweyw@gmail.com